

SCHEMA DI MONTAGGIO/*assembling scheme*

CATTEDRA DOPPIA
double conference desk:
ART. 569-669



CODICE 777 700 566

code 777 766 333
DISEGNO **SM 46007**
drawing


DATA	04-12-2008
------	------------









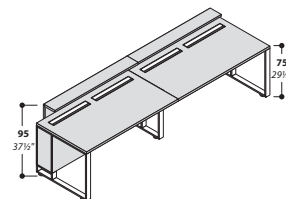







PAGINA 1/2

INDICE DI REVISIONE N°	1
last revision no.	

last revision no
DATA REVISIONE	09/01/2012
last date	


**N.B. PER IL MONTAGGIO
SEGUIRE LE FASI NUMERATE**
assemble following the numbered phase

**FASI / phases 1-2-3-4-5-6-7**

CODE	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø	COLOUR	CODE	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø	COLOUR	CODE	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø	COLOUR				
504319014	CROMO	506220908	6MA x 50	BRUNITA	505064902	8 x 30		505041903	7.5 x 36	ZINCATO	505031903	14	ZINCATO	506072219	ZINCATO	506224209	6MA x 25	ZINCATO	505041902	10 x 36	ZINCATO	507000113	INOX	505182201	FERRO	505041936	ZINCATO	505031912	16	ZINCATO	506072209	ZINCATO	40799959	TITANIO	506912609	4MA x 20	ZINCATO	505130740	CR
	chrome		6MA x 1/15/16 - Burnished		5/16" x 1/16"				5/16" x 1/8" - Zinc Plated		9/16"	Zinc Plated		Zinc Plated		6MA x 1" - Zinc Plated		3/8" x 1/8" - Zinc Plated					iron		Zinc Plated		5/8"	Zinc Plated											
																																							

CODE	Ø x L	CLOUR	CODE	CLOUR	CODE	Ø x L	CLOUR	CODE	CLOUR	CODE	CLOUR	CODE	CLOUR	CODE	CLOUR	CODE	CLOUR
504225308	6MA x 30	ZINCAZ	423631019	TITANO	504223000	6MA x 15	ZINCAZ	505130607	HERO	505130631	white	505130633	BEIGE 15	505130647	acero	505130677	acero
	6MA x 3 1/8" - zinc			titanium		6MA x 9/16" - Zinc			nero		bianco		beige 15		acciaio		acciaio

CODE	COLOUR
505070702	NERO
	black



Q
x 16


CODE	Ø x L	COLOUR
506941908	3,5 x 25	BRUNITE

1/8" x 1" - Burnish

TSPX-PZ

R

- 1** AVVITARE I PIEDINI
screw the adjustable feet
- 2** FISSARE I FIANCHI SULLE GAMBE METALLICHE
fix the side panels on the metal legs
- 3** FISSARE LE SCHIENE CENTRALI E LE TRAVI
fix the central back panel and beams
- 4** FISSARE LE STAFFE SUI FIANCHI
fix the stirrups on the side panels
- 5** FISSARE LA VASCHETTA
fix the cable tray
- 6** ASSEMBLARE I PANNELLI CON
LE MENSOLE
assemble the back panels with shelves
- 7**
- 8**

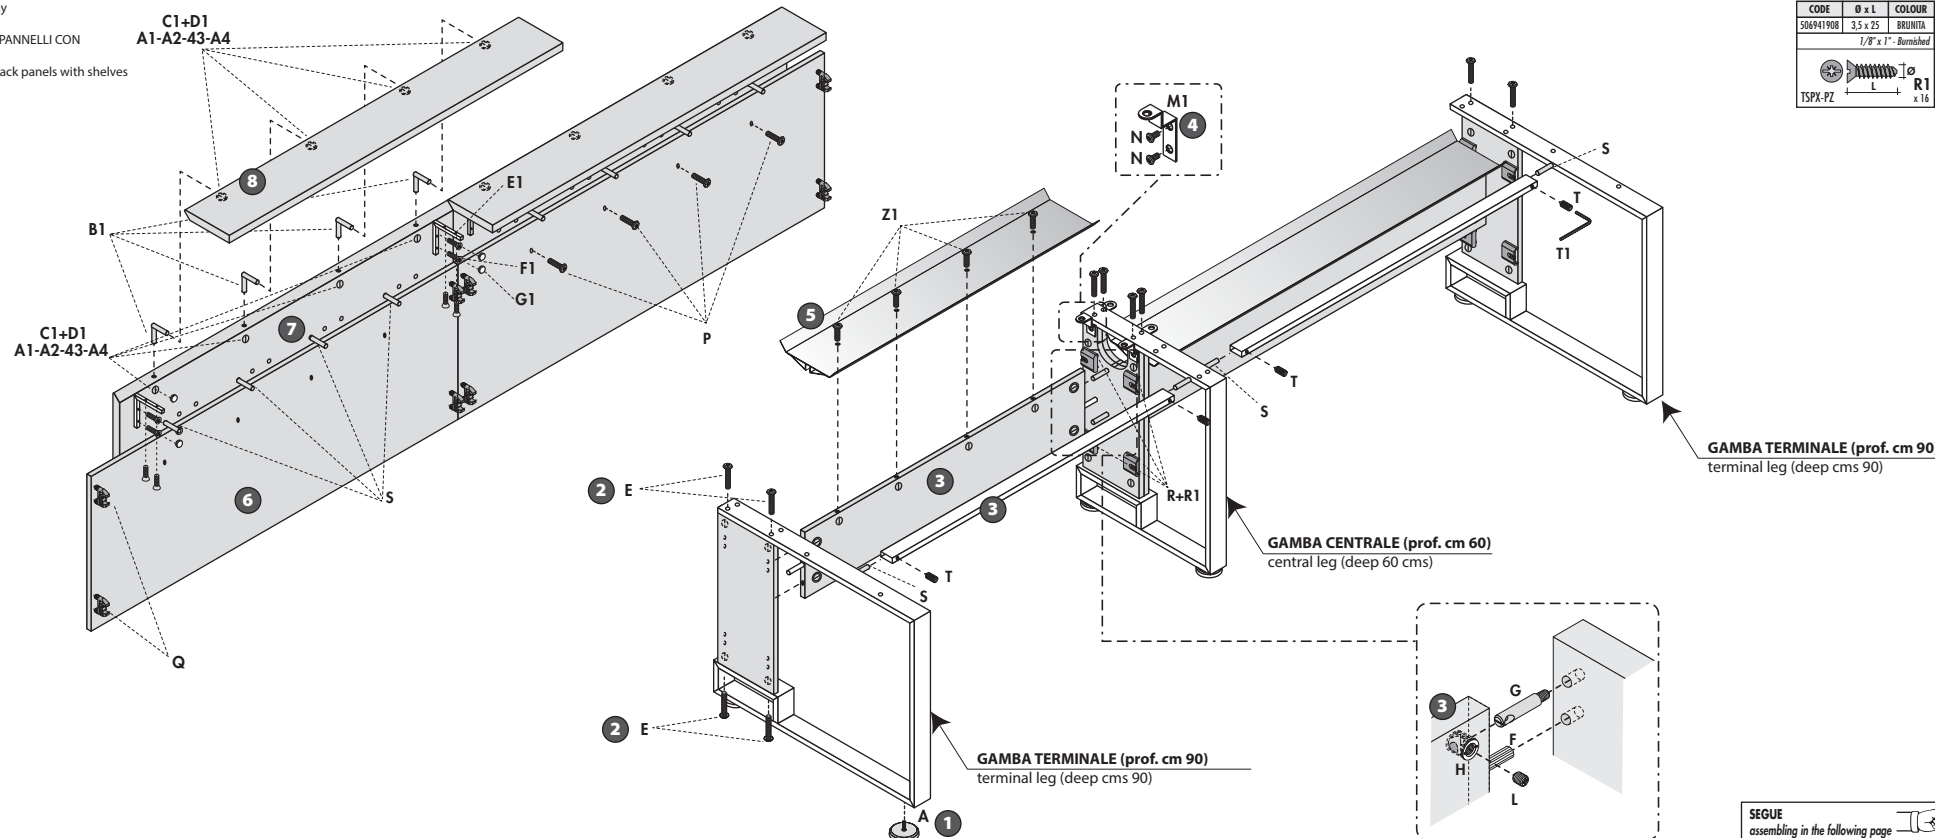

SEGUE
assembling in the following pages

FASI / phases 8-9-10

- 9

POSIZIONARE I PIANI

position the tops
- 10

FISSARE I PIANI DA SOTTO






fix the tops from below
- 11

INSERIRE I PANNELLI DI TAMPONAMENTO A SCATTO

insert the blind panels to "click"
- 12

FISSARE LE STAFFE CON LE VITI

fix the stirrups with screws

CODE	Ø	COLOUR	CODE	COLOUR	CODE	Ø x L	COLOUR	CODE	Ø x L	COLOUR	CODE	COLOUR
505031912	16	ZINCATO	506072209	ZINCATO	506225308	6MA x 30	ZINCATO	506223000	6MA x 15	ZINCATO	407990519	ARGENTO
	5/8"	Zinc Plated		Zinc Plated		6MA x 1 3/16"	Zinc Plated		6MA x 9/16"	Zinc Plated		silver
C1 x 8			D1 x 8		P x 10			N x 8			H1 x L	

